




# InstaShare Quick Start Guide

## STEP 1


---

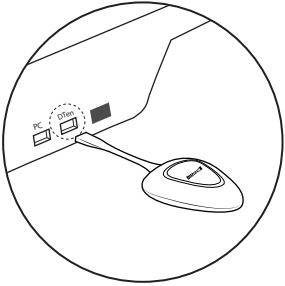

First Time Use:  
Pairing - Connect InstaShare dongle to DTen USB located in the front side of DTen, unplug it until pairing is succeeded .

## STEP 2

---

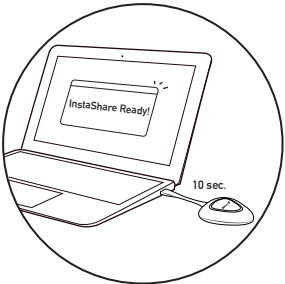

Plug InstaShare dongle to your PC or Mac, wait around 10 seconds until you see "InstaShare Ready".

## STEP 3

---



Press button on InstaShare dongle, your PC/Mac screen will be on DTen instantly.



# InstaShare Quick Start Guide

---

## Basic Troubleshooting

When the system cannot get connected, please troubleshoot as following:

1. Check whether InstaShare software is running properly on your PC/MAC.
2. Pair InstaShare dongle with DTen.
3. Switch the power button located at the bottom of DTen to restart.

## Indicators Status Descriptions

1. Blinking: InstaShare is connecting to DTen.
2. Steady on: InstaShare is connected to DTen and ready to use.
3. Dim light: DTen is working

## Key Specifications

1. Operating systems supported: Win7/Win8/Win8.1/MacOS
2. Frequency: 5.8 GHz
3. Latency: < 120 ms
4. Overall dimensions (L x W x D): 77 mm x 178.7 mm x 21.3 mm

\* Subject to change without notice